



## Why D7 is Superior to other Products for Disinfection of SARS-CoV-2

D7 is an aqueous-based disinfectant that can rapidly neutralize highly toxic chemical and biological materials. The formulation:

- is effective for killing pathogenic organisms including bacteria, viruses, biofilms, and fungi and for neutralizing highly toxic chemicals;
- utilizes very mild ingredients that gives it very low toxicity and corrosivity properties;
- can be deployed as a foam, liquid spray, or fog on a wide variety of materials and surfaces.


D7 contains surfactants, mild solvents, inorganic salts, a low concentration of hydrogen peroxide (~3.5%), a hydrogen peroxide activator, and water. The surfactants soften the cell walls of pathogens which allows the activated peroxide to penetrate to the interior for complete kill. This unique combination of mild ingredients works synergistically to kill persistent biological pathogens which has been demonstrated in testing at government and private facilities and in many field applications – outperforming formulations that contain much harsher chemicals. D7 is registered by the U.S. Environmental Protection Agency (US EPA) for many pathogens such as *Listeria*, *E. coli*, *Staphylococcus*, *Salmonella*, Norovirus, the Porcine Epidemic Diarrhea Virus, *Staph* and *Pseudomonas* biofilms, Avian Influenza viruses as well as Emerging Viral Pathogens.

D7 can effectively inactivate coronaviruses. In tests at Kansas State University, D7 was shown to rapidly and completely inactivate a >5Log10 concentration of Bovine Coronavirus (BCV) with a one minute contact time even in the presence of a 50% organic loading (Bieker et al., Rapid Inactivation of SARS-like Coronaviruses, Sandia National Laboratories, SAND2004-1120, <https://prod-ng.sandia.gov/techlib-noauth/access-control.cgi/2004/041120.pdf>). Note that in the study, D7 is referred to by its development name of DF-200. Based on these results, D7 can effectively be used to disinfect facilities against SARS-CoV-2 – even with high organic or soil loads.

D7 is currently being extensively used world-wide to combat COVID-19 with excellent results. Over 1000 tons of D7 have been used in medical facilities and other facilities in China and other countries in the last two months to successfully disinfect the SARS-CoV-2 virus. According to medical personnel in China, it is the only disinfectant that seems to work against SARS-CoV-2. It is also being successfully used for disinfection operations in virtually every other country with significant numbers of COVID-19 cases and also in countries without many cases where disinfection operations have been stepped up to prevent the spread of the virus.

Why is D7 a superior disinfectant for SARS-CoV-2 as compared to many other products? The primary reason is that, in real world applications, SARS-CoV-2 does not exist alone. When airborne, SARS-CoV-2 is almost always surrounded by and protected by bodily fluids (e.g., saliva, nasal mucous, etc.) which makes it very persistent in the environment. When it lands on a surface, the situation is even worse because SARS-CoV-2 is also protected by organic material and soil on those surfaces making it even more persistent. In addition, the genetic material in the SARS-CoV-2 virus is surrounded by a lipid envelope (i.e., an oily material). **The detergents and mild solvents in D7 cut through the bodily fluids, soil/organic material, and lipid envelope**

so that the hydrogen peroxide and activated hydrogen peroxide in D7 actually reaches and destroys the virus. Other disinfectants are repelled or inactivated by the bodily fluids, soil/organic material, and lipid envelope surrounding SARS-CoV-2 and never actually come in contact with the virus so it survives. Many of these other disinfectants pass laboratory tests against viruses in artificial conditions but fail in real-world applications. For example, 10% chlorine bleach achieves high efficacy against pathogens in laboratory tests but often fails in the field because it does not penetrate organic matter. The superior action of D7 in the presence of organic materials is illustrated in Figure 1 below (note that the actual SARS-CoV-2 virus is even more complex than what is shown in the figure and contains a virus protein coat [i.e., capsid] making it even more important to use a disinfectant such as D7 to penetrate this coat and reach the RNA).

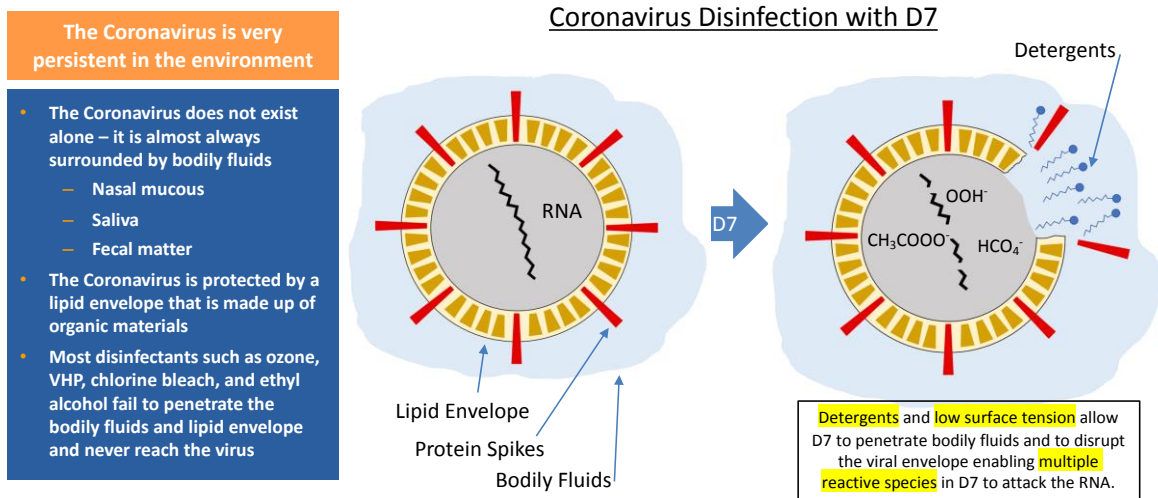

**Figure 1: The detergency and low surface tension in D7 allows it to penetrate organic matter and bodily fluids to reach and destroy the SARS-CoV-2 virus.**

The second reason why D7 is a superior disinfectant for SARS-CoV-2 is that it has very high efficacy against a large spectrum of pathogens, including SARS-CoV-2. Efficacy in disinfectants is measured by log kill as shown in Table 1 below:

Log <sub>10</sub> Kill	Percent Kill (%)	Remaining Virus from original 10,000,000 present	Representative Disinfectants
1	90	1,000,000	
2	99	100,000	
3	99.9	10,000	Ethyl Alcohol, Quats
4	99.99	1000	
5	99.999	100	
6	99.9999	10	10% Chlorine Bleach
7	99.99999	0	D7

\*Note that the efficacy estimates are not intended to include all disinfectants but only examples of low efficacy and high efficacy products.

**Table 1: Log kill efficacy of disinfectants**



Unfortunately, many government organizations and others are promoting the use of low efficacy disinfectants in the battle against COVID-19. For example, most hand sanitizers use ethyl alcohol as their primary disinfecting ingredient. Other products may only contain quaternary ammonium compounds (i.e., quats) that also have relatively low efficacy. Using these types of disinfectants (and others with low efficacy) may present a significant problem because the large number of SARS-CoV-2 viruses deposited on a surface from the cough or a sneeze of an infected person may overwhelm these low efficacy disinfectants leaving infectious viruses behind even after disinfection operations. Recent research (Pan et al., Viral Load of SARS-CoV-2 in clinical samples, The Lancet, 20:4 [pp. 411-412], February 24, 2020) has shown that COVID-19 patients may have very high levels of SARS-CoV-2 viruses (i.e., viral load) in their upper respiratory system that could be expelled during a cough or sneeze. The sizes of a droplet expelled during a sneeze varies from <10 µm to as large as 1000 µm (Han et al., Characterizations of particle size distribution of the droplets exhaled by sneeze, Journal of the Royal Society, 10:88, November 6, 2013). Based on the data from these two studies, the number of SARS-CoV-2 viruses expelled during a sneeze from larger sized droplets (i.e., droplets that are likely to land on a surface) and the associated results of low efficacy vs. high efficacy disinfectants under various conditions (i.e., best case vs. worst case scenarios) are summarized in Table 2 below:

	Low Infectious Conditions	Moderately Infectious Conditions	Highly Infectious Conditions
Viral load in the upper respiratory tract of a COVID-19 patient	10 <sup>6</sup> /ml	10 <sup>9</sup> /ml	10 <sup>10</sup> /ml
Sneeze Droplet Size	200 µm	500 µm	800 µm
Sneeze Droplet Volume	4.2x10 <sup>-6</sup> ml	6.5x10 <sup>-5</sup> ml	2.7x10 <sup>-4</sup> ml
Viral load in a single sneeze droplet from the respiratory tract that may land on a surface	~4	~65,000	~2,700,000
Remaining SARS-CoV-2 viruses in the single sneeze droplet after disinfection with <b>Ethyl Alcohol</b> (99.9% efficacy)	0	<b>65</b>	<b>2700</b>
Remaining SARS-CoV-2 viruses in the single sneeze droplet after disinfection with <b>D7</b> (99.99999% efficacy)	0	0	0

**Table 2: Potential number of viruses remaining from a single sneeze droplet following alternative disinfection processes.**

**As can be seen, use of low efficacy disinfectants (such as ethyl alcohol or quats alone) may leave infectious SARS-CoV-2 viruses on the surface which can lead to the possibility of new infections in people that come in contact with these surfaces or fomite transport (i.e., transport on shoes, clothing, equipment, etc.) to other surfaces and areas.** The situation is likely worse than shown in Table 2 because, as noted above, disinfectants utilizing ethyl alcohol and even those containing chlorine bleach may not even achieve their maximum efficacy in the field because of the presence of bodily fluids and other organic matter. **However, the situation is**

quite different if D7 is used because its higher efficacy can effectively destroy all the SARS-CoV-2 viruses in the sneeze droplets on the surface – even in highly infectious conditions.

An ideal disinfectant for field applications should have low toxicity and low corrosivity properties so that it does not harm people or property and it should be biodegradable so it does not harm the environment. In addition, an ideal disinfectant should have low odor and off-gassing properties after application so an area can be quickly re-occupied and re-used after operations are complete. **Unfortunately, many disinfectants such as those that contain chlorine compounds (e.g., sodium hypochlorite [chlorine bleach], hypochlorous acid, sodium dichloroisocyanurate [dichlor], sodium trichloroisocyanurate [trichlor], and chlorine dioxide) and those that contain peracetic acid are often toxic, corrosive, and give off strong odors during and after application.** These types of disinfectants may require rinsing and/or long ventilation times after use before personnel can re-occupy the area. D7, however, is very different. **The mild ingredients in D7 give it very low toxicity and corrosivity properties and it is odor-free after application making it safe for people and property. D7 is also biodegradable so it does not harm the environment.** An example of the difference in corrosion properties between D7 and 10% chlorine bleach is shown in Figure 2.



**Figure 2: Comparison of the corrosion of D7 vs. 10% chlorine bleach on steel coupons.**

The final reason why D7 is so effective against SARS-CoV-2 is that it can easily be deployed by a variety of methods to handle any situation – including both enclosed (i.e., sealed) and unenclosed (i.e., unsealed) spaces. It can be dispersed as a highly stable foam through existing foam generating equipment. When deployed as a foam, it clings to vertical and downward facing surfaces for 30 minutes or more to achieve long contact times against persistent toxic materials including biofilms. It can also be deployed as a liquid spray either through large-scale sprayers or from a hand-held spray can (i.e., BDAS+) which enables rapid deployment within seconds. **D7 can also be deployed as a fog (or mist) from aerosol-generating devices primarily for interior decontamination – which is the ideal deployment method for both large and small spaces potentially contaminated with SARS-CoV-2.** It is important to note that many gas- and vapor-phase disinfectants (e.g., ozone, chlorine dioxide, vapor-phase hydrogen peroxide, etc.) require use in a space that can be completely sealed because they must maintain a specific concentration for a specified time which cannot be achieved if the gas is leaking from the space. **Fogging applications of D7 do not require a completely sealed space to achieve successful application.**

Finally, D7 can also be deployed by wetting microfiber towels and wiping touch points (e.g., door knobs, hand rails, escalator rails, etc.) where SARS-CoV-2 likely resides. Once D7 comes into contact with the virus, either in the air or on surfaces, it is quickly destroyed reducing the risk of infections to people in the area and reducing the potential for fomite transport. **Most importantly, when D7 is deployed using any one of these methods, it eliminates SARS-CoV-2 even when it is embedded in soil, organic material, and bodily fluids which renders other disinfectants ineffective.**



**Figure 3: Multiple deployment for D7 make it highly effective for many scenarios**

In summary, D7 is a superior to other products for SARS-CoV-2 disinfection applications because of the following reasons:

- The detergency and low surface tension in D7 allow it to penetrate organic material, bodily fluids, and the lipid envelope enabling it to reach the virus and destroy it whereas most other disinfectants are repelled by these materials and don't actually reach the virus.
- The high efficacy of D7 (99.99999%) allow it to completely destroy large numbers of SARS-CoV-2 viruses whereas other lower efficacy disinfectants are overwhelmed and fail.
- It has very low toxicity and corrosivity properties, low odor (i.e., off-gassing) properties, and is biodegradable.
- The multiple deployment options of D7 enable it to work in many scenarios both in enclosed and unenclosed spaces.

For these reasons, D7 should be the primary choice for SARS-CoV-2 disinfection operations. A summary and comparison of properties important to consider for use of disinfectants against SARS-CoV-2 is shown in Table 3.

Disinfectant	Achieves high efficacy in <u>laboratory</u> testing	Contains detergents and low surface tension to penetrate organic matter for <u>real-world</u> effectiveness using multiple reactive species	Has low toxicity, low corrosivity, low odor and off-gassing properties and is biodegradable	Can be used in both enclosed (sealed) and unenclosed (unsealed) spaces	Can be deployed using multiple methods (spray, fog, wipes, etc.)
D7	Yes	Yes	Yes	Yes	Yes
10% Chlorine Bleach (and other chlorine containing compounds)	Yes	No	No	Yes (ventilation may be needed before re-use)	Yes (low contact times possible due to fast run-off)
Peracetic Acid	Yes	No	No	Yes (ventilation may be needed before re-use)	Yes (low contact times possible due to fast run-off)
Ozone (gas)	Yes	No	No	No	No
Chlorine Dioxide (gas)	Yes	No	No	No	No
Chlorine Dioxide (liquid)	Yes	No	No	Yes (ventilation may be needed before re-use)	Yes (low contact times possible due to fast run-off)
Vapor-phase Hydrogen Peroxide	Yes	No	Yes (some corrosivity possible)	No	No
Liquid Hydrogen Peroxide/Peracetic Acid	Yes	No	Yes (some corrosivity possible)	Yes (ventilation may be needed before re-use)	Yes (low contact times possible due to fast run-off)
Ethyl Alcohol	No	No	Yes	Yes	No
Quaternary Ammonium	No	No	Yes (biodegradability may be an issue for some compounds)	Yes	No
Phenolic	No	No	No	Yes (ventilation may be needed before re-use)	No
Citric Acid (and other mild acids such as vinegar, lactic acid, glycolic acid)	No	No	Yes	Yes	No

**Table 3: Comparison of disinfectants for SARS-CoV-2 applications.**